



Gayla 1714 Butterfly Kite

Assembly Instructions

STEP 1: INSERT ONE END OF EACH ROD INTO THE LONG POCKET AT THE TOP OF THE KITE.

STEP 2: INSERT THE OTHER END OF EACH ROD INTO THE SMALL POCKET TOWARD THE BOTTOM OF THE KITE.

NOTE: THE TWO OUTSIDE RODS GO UNDER THE CENTER ROD

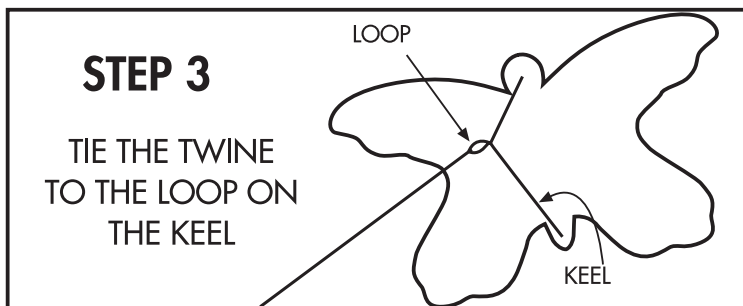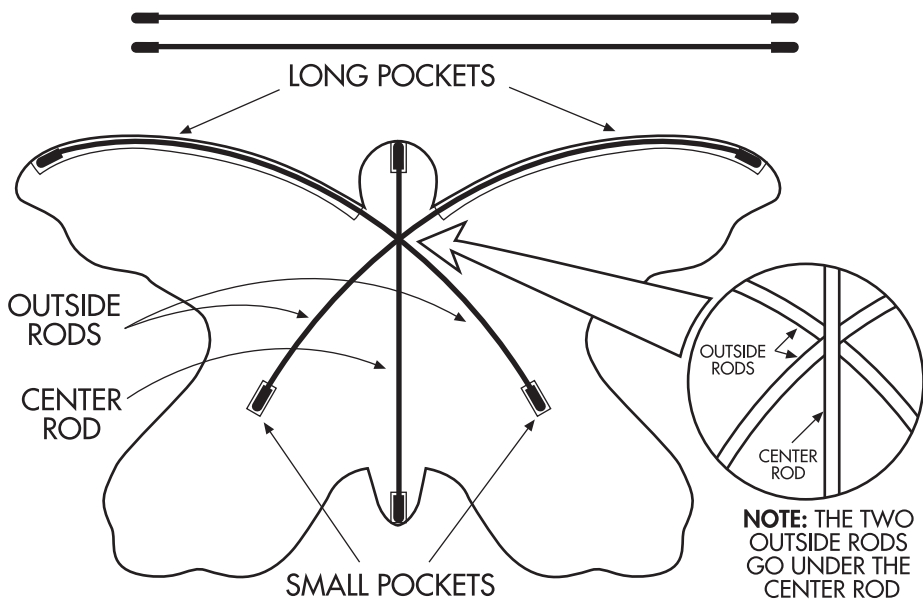

PO BOX 920800 HOUSTON TEXAS 77292-0800

WEB ADDRESS: www.gaylainc.com