


Gayla Item #893 Hammer Head Shark Kite

Assembly Instructions


- 1) Insert the 2 rods (A) into the center piece and the pockets of the kite's head located at the top of the kite body.
- 2) Insert the 2 rods (C) into the center piece and the pockets of the kite's fins located in the middle of the kite body.
- 3) Insert rod (B) into the pockets of the kite's fins located at bottom of the kite body.

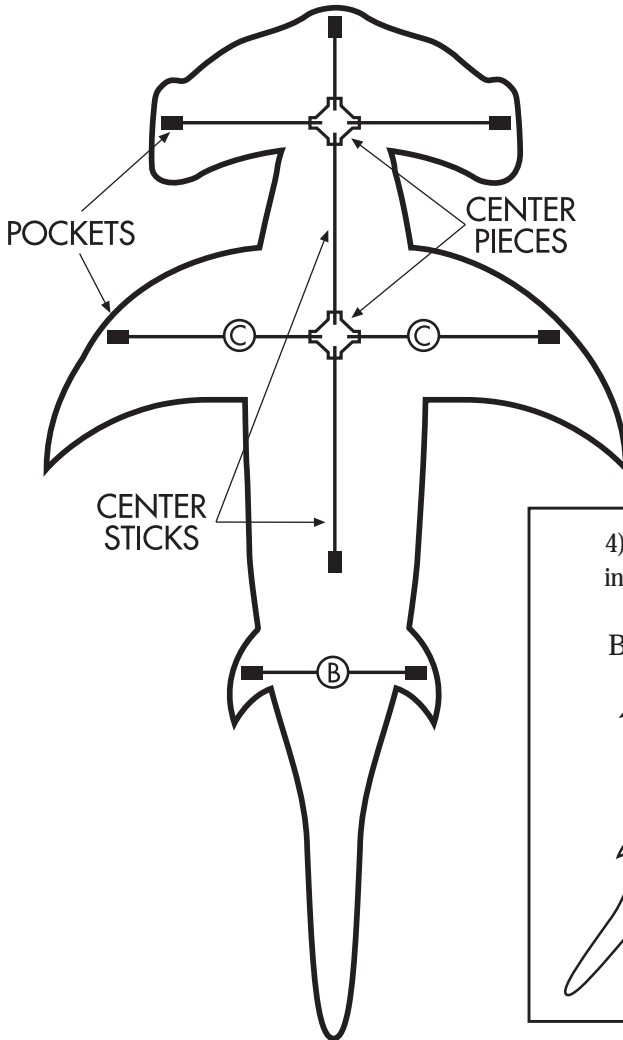

RODS

- (A) (2) 11.25"
- (B) 15.5"
- (C) (2) 16.25"

- 4) Tie the twine to the loop in the middle of the bridle

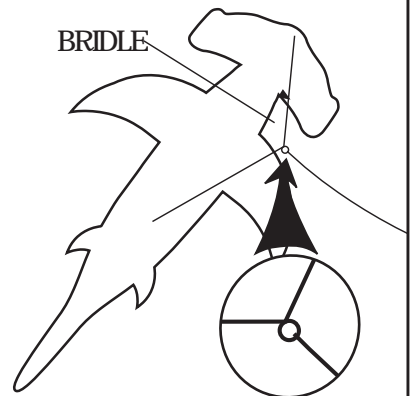

PO BOX 920800 HOUSTON TEXAS 77292-0800
WEB ADDRESS: www.gaylainc.com