




1316 AIR FORCE STUNT KITE ASSEMBLY INSTRUCTIONS

FRONT SIDE

INSERT 2 RODS "A" INTO THE SIDE AND CENTER CONNECTORS.
THEN CONNECT 2 RODS "B" TO RUBBER CONNECTORS.

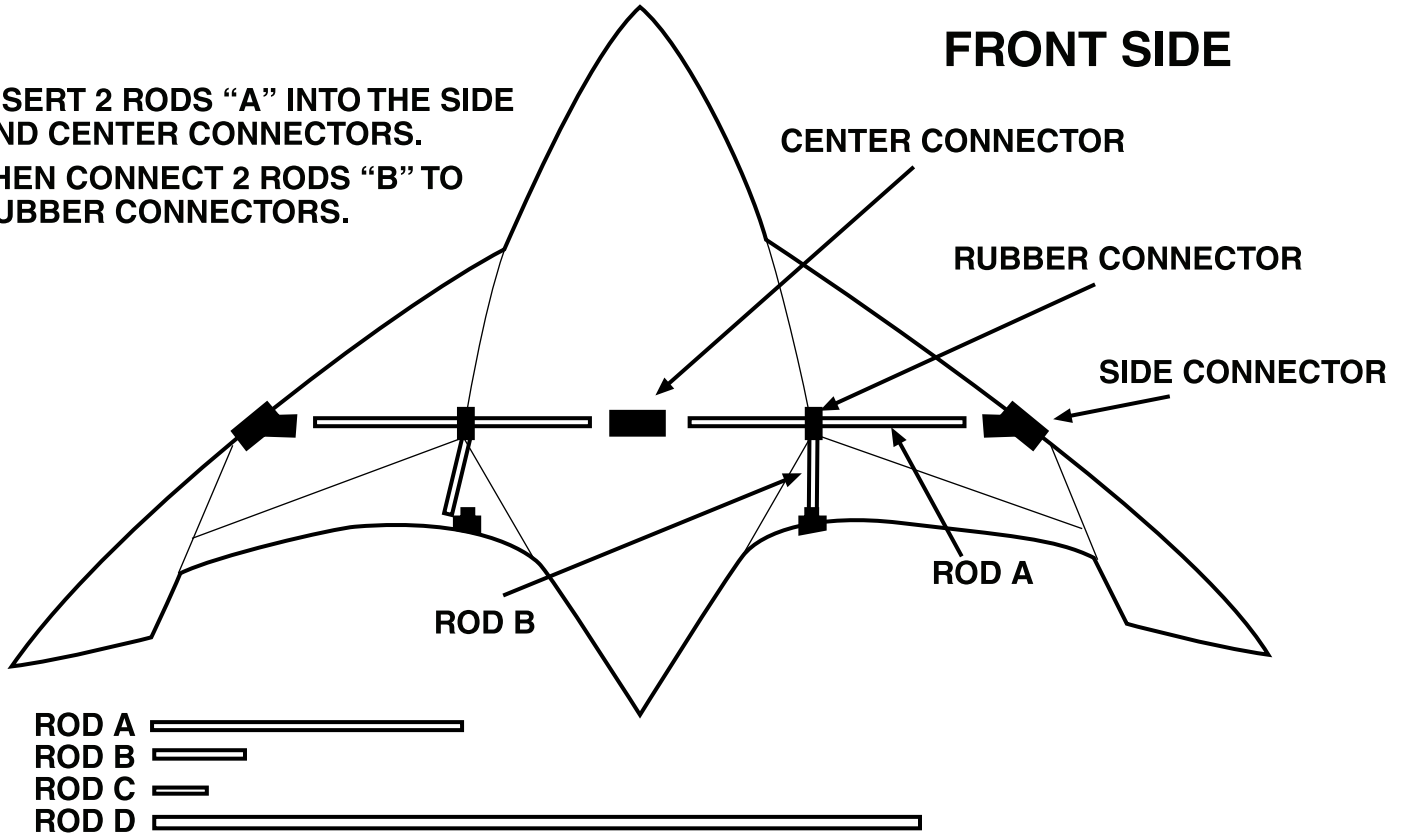

BACK SIDE

INSERT 2 RODS "D" THROUGH THE SLEEVE ON WINGS AND INTO THE TRIANGULAR CONNECTOR.
THEN PLACE ELASTIC BANDS ON THE OTHER ENDS OF RODS "D".
THEN CONNECT 2 RODS "C" TO THE BOTTOM CONNECTORS.

