


# Gayla 1318, 1317, 1319 & 1321 Kite Assembly Instructions

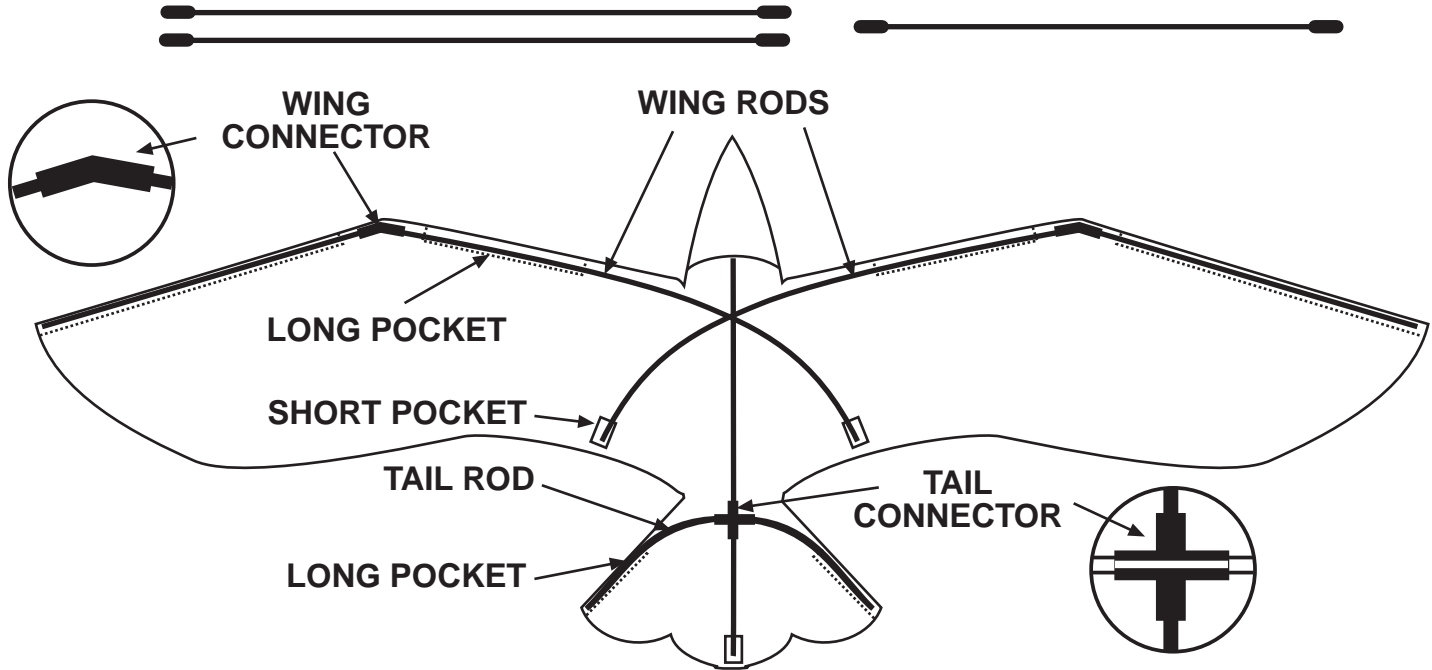

**STEP 1:** Insert one end of each wing rod through the long pocket and into the wing connector.

**STEP 2:** Insert the other end of each wing rod into the short pocket.

**STEP 3:** Insert the ends of the tail rod through the long pockets on the tail.

**STEP 4:** Push the tail connector onto the tail rod.