


# Gayla 1323 3-D Macaw Parrot Kite Assembly Instructions

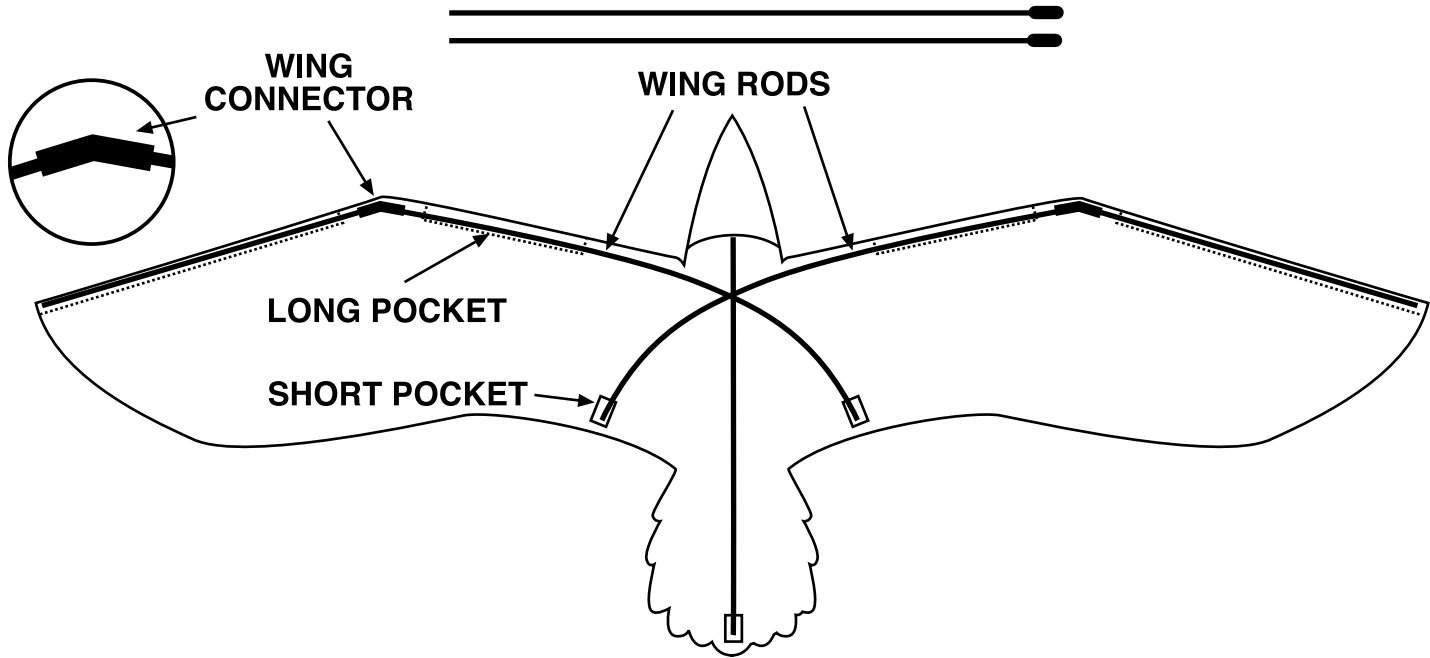

**STEP 1:** Insert one end of each wing rod through the long pocket and into the wing connector.

**STEP 2:** Insert the other end of each wing rod into the short pocket.