


Gayla 1704, 1706, 1705 & 1715 Kite Assembly Instructions

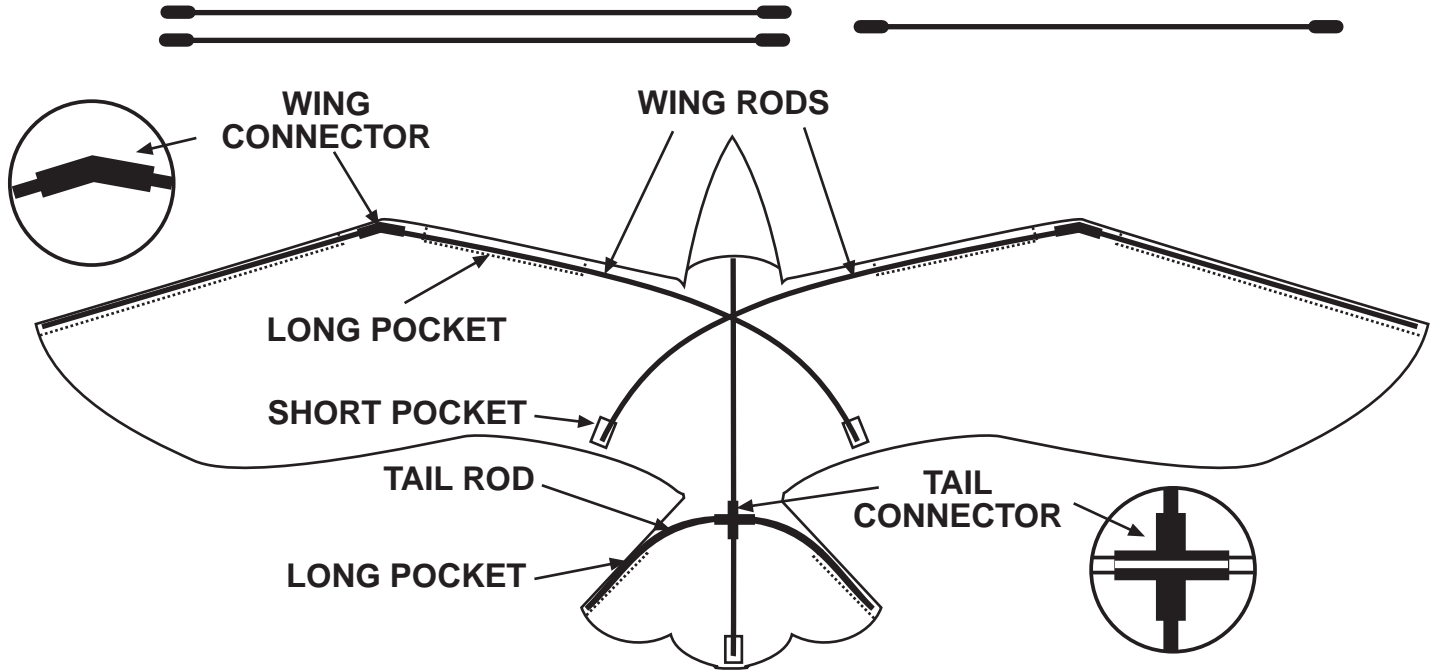

STEP 1: Insert one end of each wing rod through the long pocket and into the wing connector.

STEP 2: Insert the other end of each wing rod into the short pocket.

STEP 3: Insert the ends of the tail rod through the long pockets on the tail.

STEP 4: Push the tail connector onto the tail rod.