
## Gayla 1712 Kite Assembly Instructions


## **WING ROD**




## REAR HORIZONTAL ROD

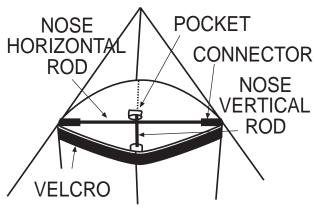


STEP 1: Open the velcro closure to expose the inside of the kite. Then insert the ends of the vertical rod into the pockets at the top and bottom. Then insert each end of the horizontal rod into the connectors at each side.

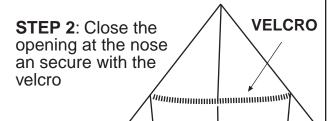


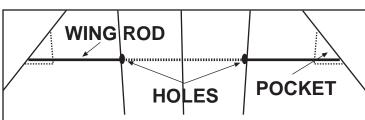

**STEP 3**: insert the wing rod through the hole and into the pockets on each wing.

of the long body rods into the pockets at the rear of the kite. (NOTE: the long body rods extend from the nose of the kite to the rear of the kite.)

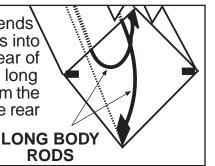

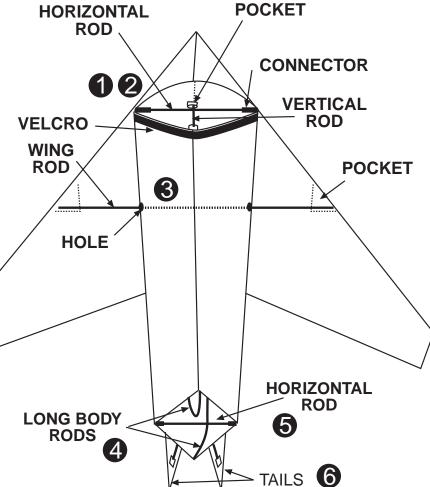

rod through the hole and into the pocket inside the body of the kite. Then insert the other end into the pocket in the tail. (NOTE: repeat this step for the right and left tails.)

HOLE

HOLE


HOLE

TAIL

ROI

ROI

P

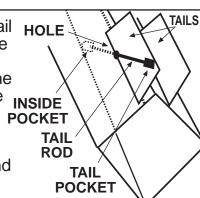

STEP 6: Insert the ends of the horizontal rod into the connectors on each side of the rear of the kite.

