



Gayla 3-D Butterfly Kite

Assembly Instructions

STEP 1: INSERT TOP WING RODS INTO THE LONG POCKETS AND INTO THE TOP CONNECTOR.

STEP 2: INSERT BOTTOM WING RODS INTO THE BOTTOM CONNECTOR AND INTO THE SMALL POCKETS.

BOTTOM WING RODS

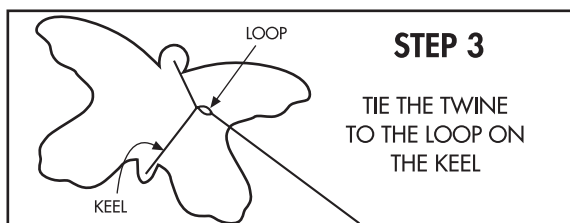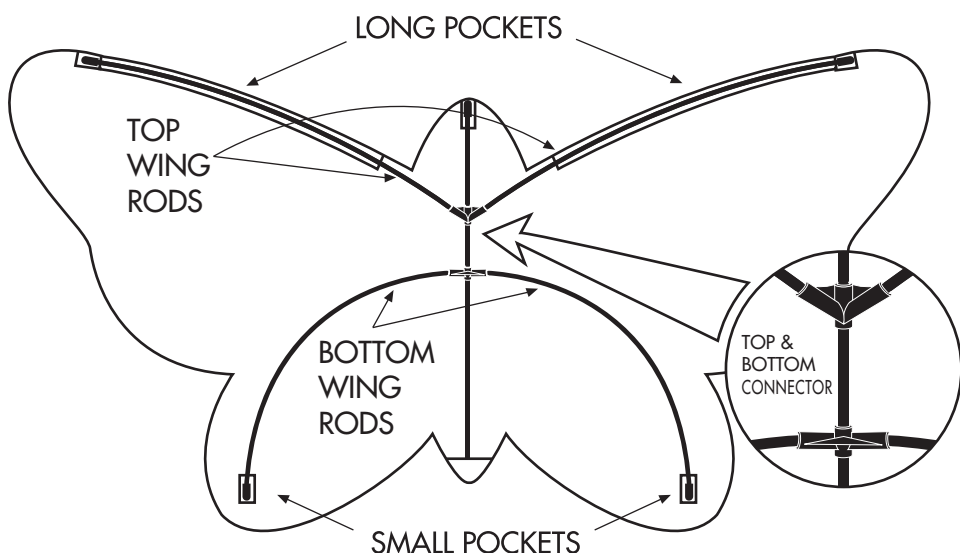

PO BOX 920800 HOUSTON TEXAS 77292-0800

FAX: 713-682-1357

WEB ADDRESS: www.gaylainc.com