

3-D KITE STOCK NO. 640,644


ASSEMBLY INSTRUCTIONS

BEFORE BEGINNING, CAREFULLY READ THE INSTRUCTIONS. NEXT, SEPARATE ALL PARTS INTO GROUPS ACCORDING TO THE ILLUSTRATION ON YOUR RIGHT. SEE ILLUSTRATIONS BELOW TO BEGIN.

STEP 1:


INSERT WING BRACES

INSERT **BRACES A** UNDERNEATH THE PLANE. LOCATE THE MIDDLE STRUT CONNECTORS UNDER THE PLANE WING TOWARDS THE NOSE. INSERT THE BRACE RUNNING VERTICALLY FROM THE MIDDLE TOP CONNECTOR TO THE BOTTOM CONNECTOR. REPEAT FOR BOTH SIDE. SEE ILLUSTRATION.

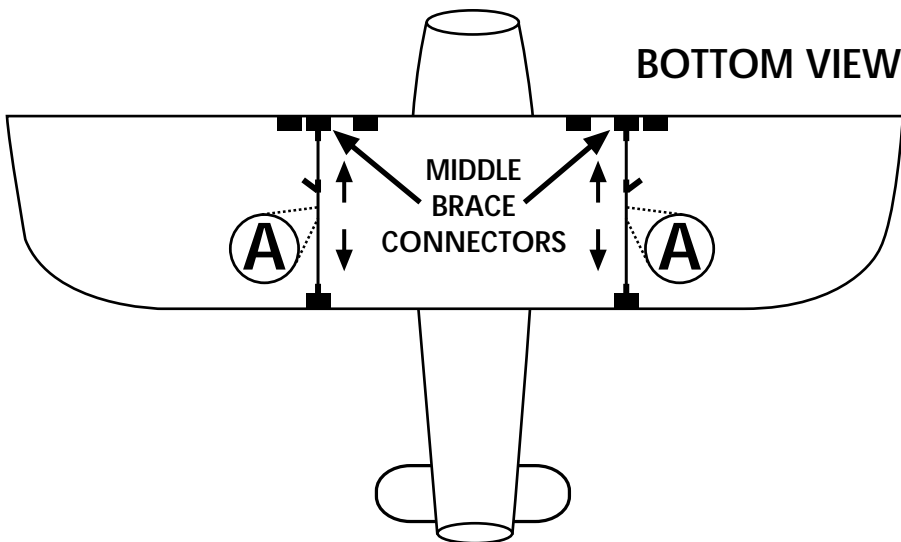


STEP 3: ASSEMBLE WHEEL BASE

INSERT STRUT STRUT ① INTO CONNECTOR. THEN INSERT ② AND ③.

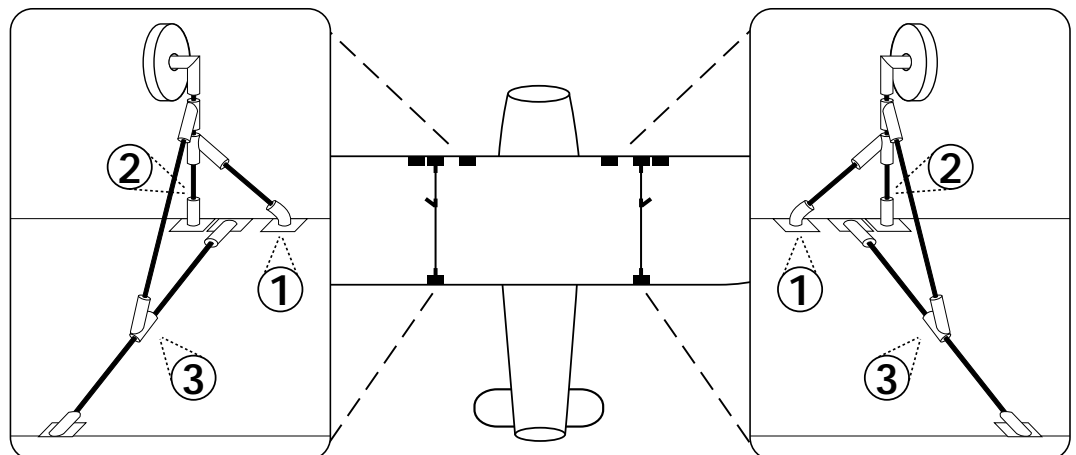


PARTS LIST

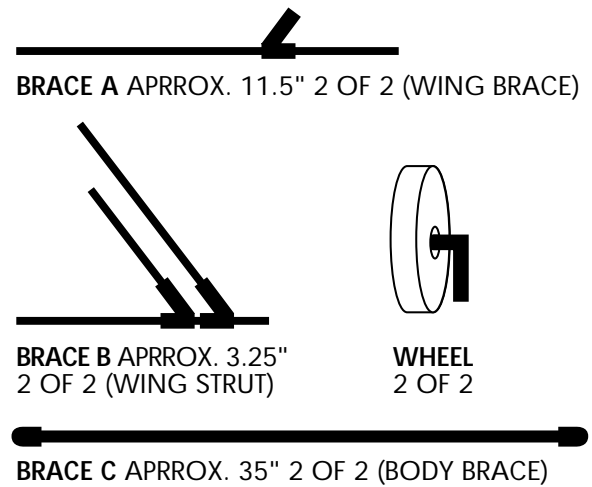

STEP 2:


INSERT WING BRACES

ATTACH WHEELS TO **BRACES B**. SEE ILLUSTRATION.

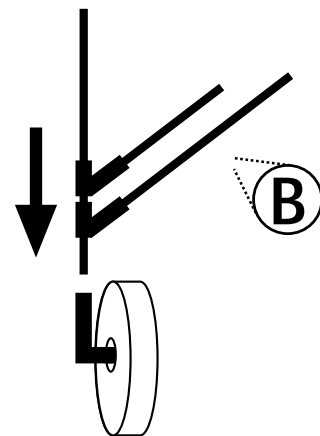


STEP 4: ASSEMBLE BODY BRACES

INSERT BODY BRACES C INTO MAIN BODY THROUGH THE LOOPS SEWN IN THE MIDDLE INSIDE THE KITE. CROSS BRACES AT EACH END AND PLACE BRACE ENDS INTO POCKETS AT EACH END OF KITE. SEE ILLUSTRATION FOR PLACEMENT.

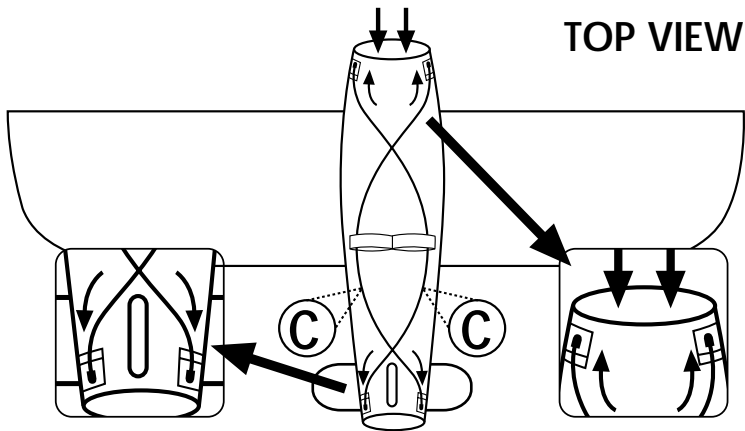


STEP 5: ATTACH SPINNING GYRO TAIL

LOCATE HOLE UNDERNEATH PLANE TOWARDS THE TAIL END. OPEN PIN ON END OF STRING ATTACHED TO THE TAIL. INSERT THROUGH HOLE. CLOSE TAIL PIN.

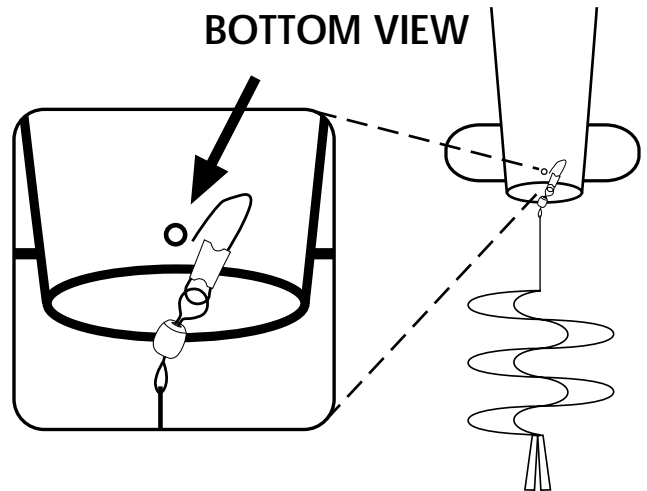

STEP 6: ATTACH TWINE TO KEEL

LOCATE KEEL UNDERNEATH PLANE. THE KEEL RUNS FROM THE FRONT OF THE WING TO THE BACK OF THE WING UNDERNEATH THE PLANE. LOCATE THE LOOP IN THE MIDDLE OF THE KEEL AND TIE TWINE THROUGH THE LOOP. NOW YOUR 3-D KITE IS READY TO FLY!

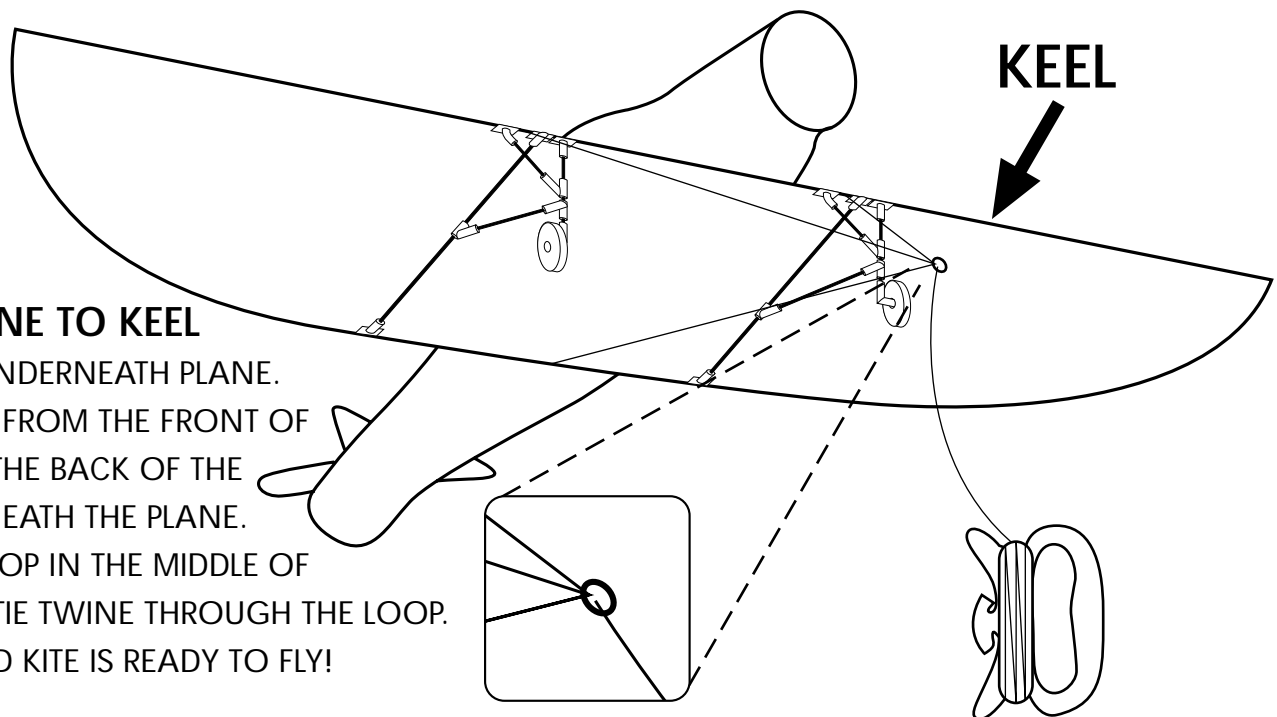

PO BOX 920800 HOUSTON TEXAS 77292-0880
WEB ADDRESS: www.gaylainc.com

GP 4744 AUG 29, 02 2 OF 2