
## Gayla 970, 971 Butterfly Kite Assembly Instructions

**STEP 1:** INSERT ONE END OF EACH ROD INTO THE LONG POCKET AT THE TOP OF THE KITE.

STEP 2: INSERT THE OTHER END OF EACH ROD INTO THE SMALL POCKET TOWARD THE BOTTOM OF THE KITE.

**NOTE:** THE TWO OUTSIDE RODS GO UNDER THE CENTER ROD

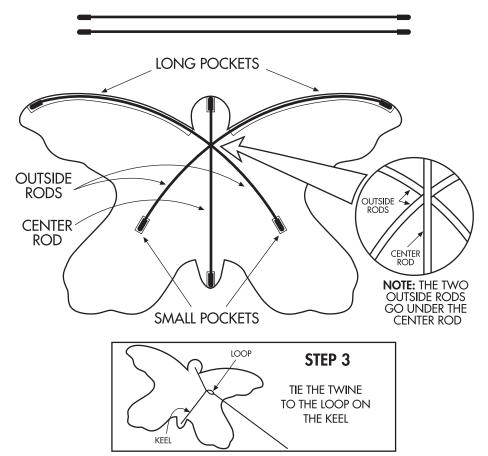



PO BOX 920800 HOUSTON TEXAS 77292-0800 WEB ADDRESS: www.gaylainc.com